




## PANEL BASE

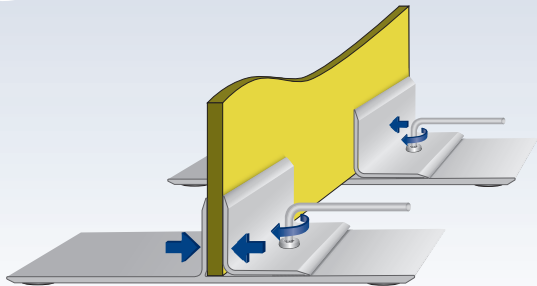

Squeeze the bracket to the panel and tighten the screws.